

Legal Notice:

Your use of the device-lab responsive stand is subject to the terms and conditions you agree to on purchase. They are available for your convenience at vanamco.com/devicelab

Vanamco AG is not liable for any loss, cost, expense, inconvenience or damage that may result from use or inability to use this product. Devices not included.



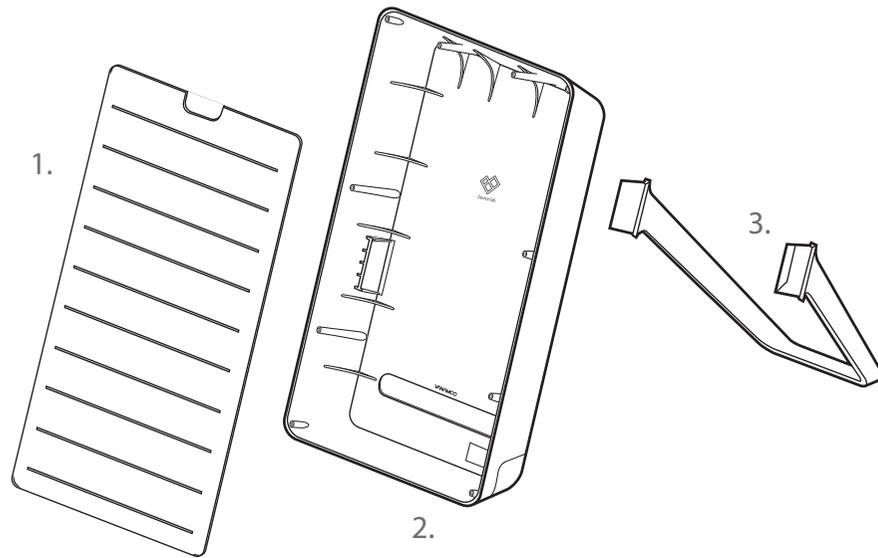


Fig. A
Exploded view

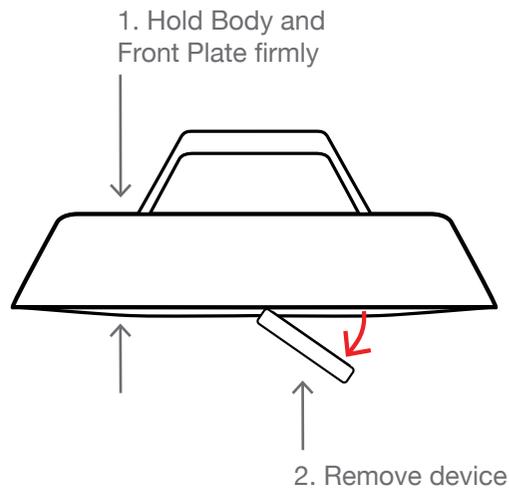


Fig. C (Top view)
Removing a device

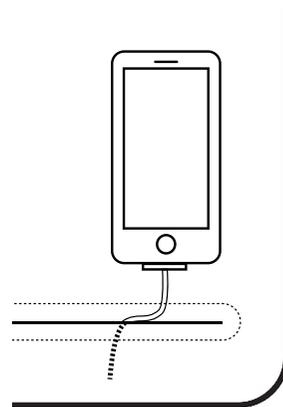


Fig. D (Front view)
Cable management

Description

Thank you for purchasing the device-lab responsive stand! Please contact us if you have any questions and visit us online for more information about your stand.

Assembling the stand (Fig. A)

The leg has to be clicked into the allocated clamps of the body. The front plate has to be fixed to the body by means of the solenoids.

1. Front Plate
2. Body
3. Leg

Additional free of charge: 2 replacement solenoids, hook- and loop-tape

Mounting the devices. (fig. B)

The device-lab responsive stand is suitable to fix several mobile devices depending on your own use. You have to attach the self-adhesive hook fasteners on the rear side of your device (see that enough fasteners will be mounted to carry the device safely). Be careful when removing the hook from the back of the device, some glue residue may still be visible.

Removing the devices. (Fig. C)

1. Securely hold the stand body including the Front Plate
2. Remove the device starting from one side, "peeling" the device off the front plate slowly

Cable management. (Fig. D)

Attach the phone and connect the cable to your device, feed the cable through the slots provided to connect them to a power source.

 @device_lab

 facebook.com/theDeviceLab

 vanamco.com/deviceLab

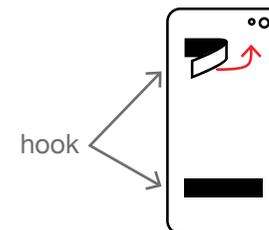


Fig. B (Back of device)
Attaching hook